

CMMG ZEROED Oversized Handguard Installation

Tools required:


- Action or receiver block
- T10 Torx wrench or driver
- 1/8 in HEX wrench or driver
- 1-3/16 in Barrel nut wrench or crows foot wrench
- Appropriate tools required for installation of gas block and muzzle device

Kit includes:

- 1 x Handguard
- 1 x Barrel nut
- 1 x Two piece collar
- 4 x T10 Collar screws (socket cap head)
- 4 x 1/8 in Handguard screws (button head)



⚠ WARNING Before performing any work on any firearm, ensure the firearm is unloaded and safe.

1. Install the barrel into the upper receiver. Apply an even coat of anti-seize lube (Molykote G-N or equivalent) to the upper receiver threads. Install the barrel nut, tighten to 45-50 ft-lbs $\pm$ 5 ft-lbs.

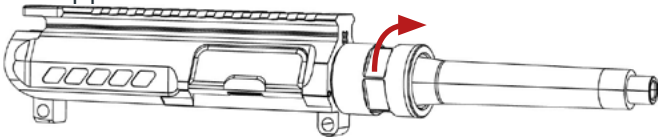


2. Install the gas block and gas tube (if applicable). Most muzzle devices may also be installed at this point. Larger diameter devices (silencers and large muzzle brakes) must be installed after the handguard.

3. Place the two piece collar around the barrel nut. Use the four T10 collar screws to fasten collar together but do not snug down, collar screws should be tight enough to hold the halves together but still rotate slightly for installation.

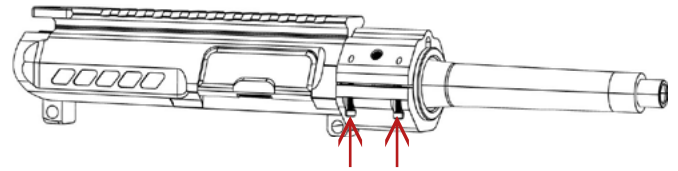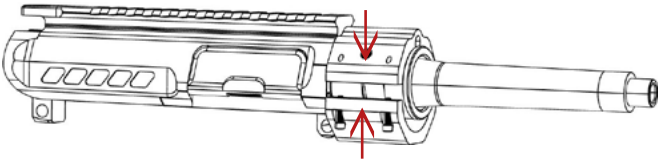

4. Slide the handguard over the collar and barrel nut. Align all the outer screw holes with the handguard and barrel nut collar and align the handguard picatinny rail with the upper receiver.

5. Install the 1/8 in button head handguard screws and tighten to 15 in-lbs.

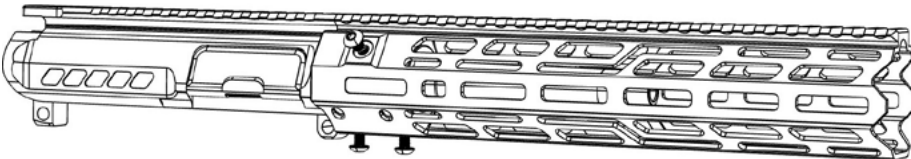

6. Tighten the T10 collar screws from step 3 through the access slots in the handguard to 12 in-lbs.

